




## ADJUSTABLE TRAVEL (FLY model only):

The Fly is adjustable from 6.25" to 7.5" travel when using a Fox R/C shock; adjustable from 6.75" to 8" with Curnutt XTD or Romic T2. This is due to actual shock stroke. Travel will be slightly more with Curnutt due to more usable stroke.

### Travel adjustment positions (see picture)

Top (A): 7.5" (Fox), 8.0" (Curnutt or Romic)  
Middle (B): 6.75" (Fox), 7.25" (Curnutt or Romic)  
Bottom (C): 6.25" (Fox), 6.75" (Curnutt or Romic)

Note: Remember to thoroughly read the shock manufacturer's instruction manual supplied with each frame. When changing travel, likely you will need to change spring rate and damping settings.

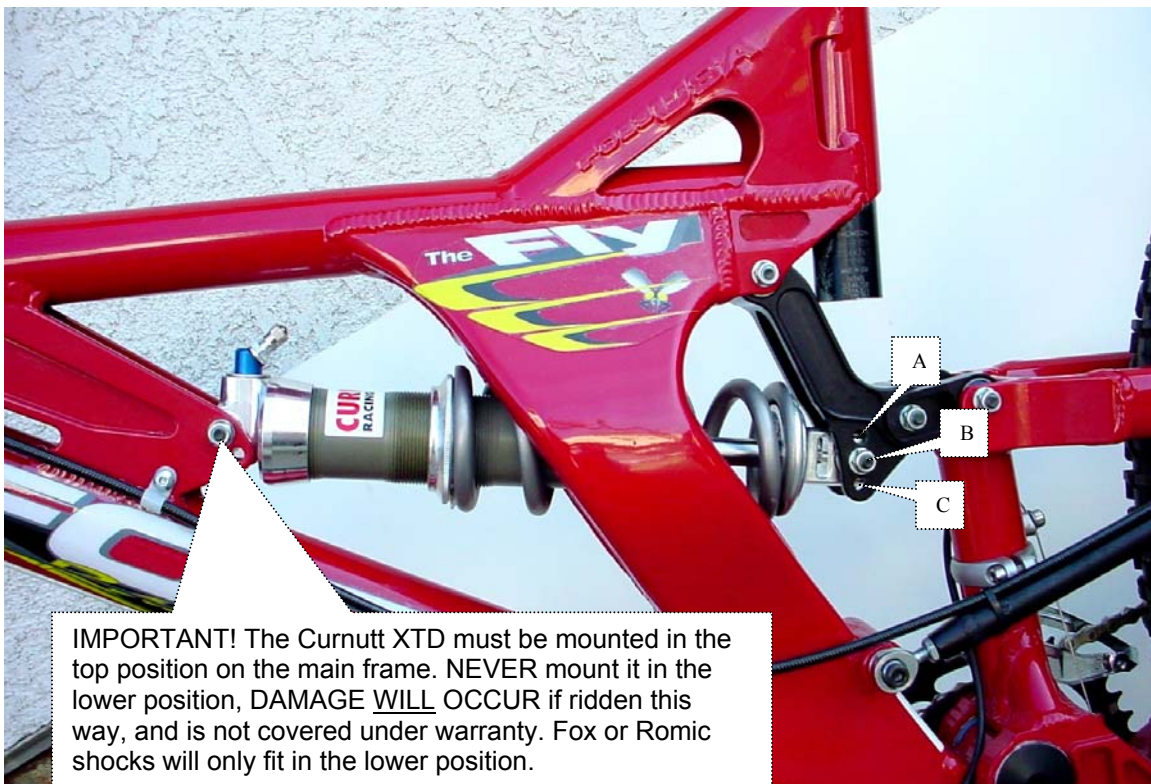

**IMPORTANT!** The Curnutt XTD must be mounted in the top position on the main frame. NEVER mount it in the lower position, DAMAGE WILL OCCUR if ridden this way, and is not covered under warranty. Fox or Romic shocks will only fit in the lower position.